 


# OWNERS MANUAL



## CF-2165A INCLINE/DECLINE

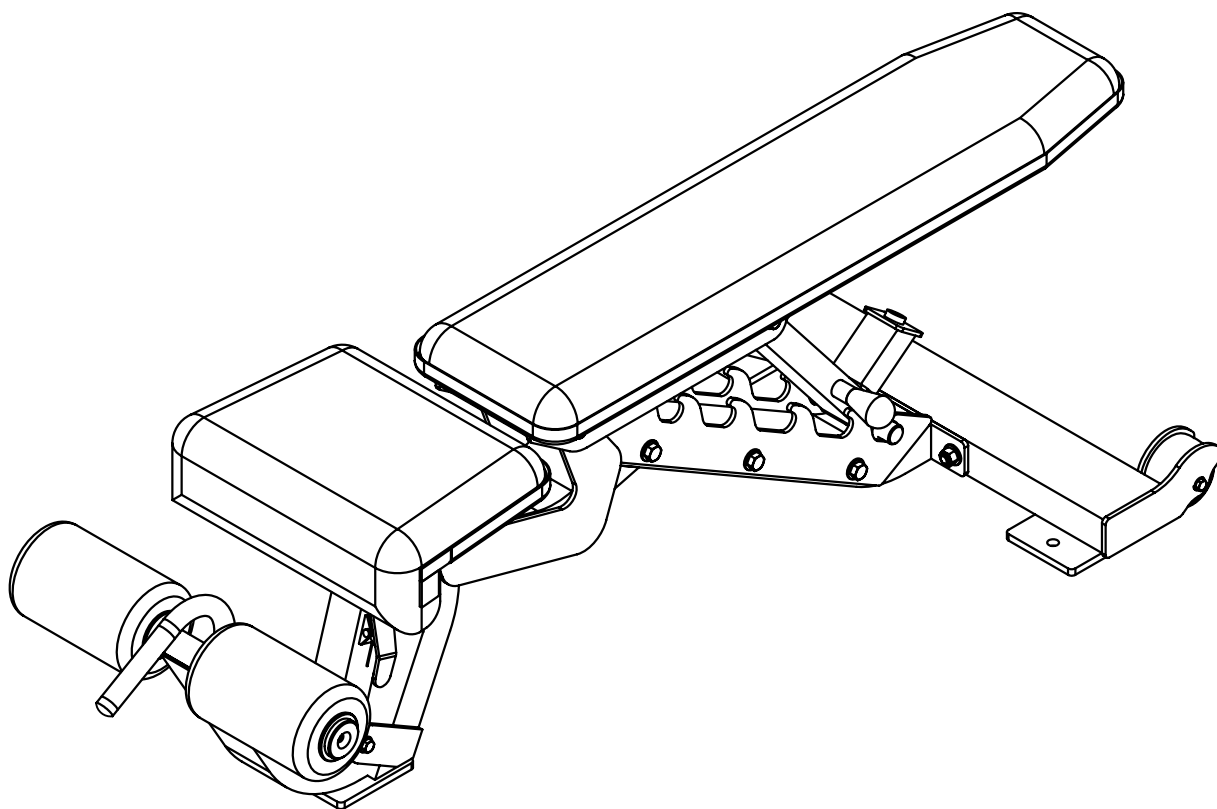

**Note: Both Serial Number and Model Number are Required when Ordering Parts**

**RECORD SERIAL NUMBER HERE**

**CATALOG NUMBER**

**0603-005**

**Customer Service**

**(800) 548-5438**

**(858) 578-7676**

**Fax**

**(858) 578-9558**

# OWNERS MANUAL

## CONTENT

<b>INSTRUCTIONS (Step 1).....</b>	<b>2</b>
<b>FRAME ASSEMBLY (Step 2).....</b>	<b>4</b>
<b>PRE-ASSEMBLY (Step 3).....</b>	<b>20</b>
<b>PART LISTING.....</b>	<b>23</b>
<b>HARDWARE LISTING.....</b>	<b>24</b>
<b>BOLT SIZING CHART.....</b>	<b>25</b>
<b>WASHER SIZING CHART.....</b>	<b>27</b>
<b>WEIGHT TRAINING TIPS.....</b>	<b>29</b>
<b>WEIGHT TRAINING EXERCISE LOG.....</b>	<b>31</b>
<b>DECAL PLACEMENTS.....</b>	<b>33</b>
<b>GENERAL MAINTENANCE INFORMATRION.....</b>	<b>38</b>
<b>LIMITIED WARRANTY.....</b>	<b>40</b>

# **OWNERS MANUAL**

## **Step 1 INSTRUCTIONS**

**Before beginning assembly please take the time to read the instructions thoroughly. Please use the various lists in this manual to make sure that all parts have been included in your shipment. When ordering, use the part number and description from the lists. Use only Hoist replacement parts when servicing. Failure to do so will void your warranty and could result in personal injury.**

**Hoist equipment is designed to provide the smoothest, most effective exercise motion possible. After assembly, you should check all functions to ensure correct operation. If you experience problems, first recheck the assembly instructions to locate any possible errors made during assembly. If you are unable to correct the problem, call your authorized Hoist dealer. Be sure to have your serial number and this manual when calling. When all parts have been accounted for, continue on.**

## **TOOLS REQUIRED**

**Socket Wrench**

**1/2", 9/16" and 3/4" Sockets**

**3/4" Open end Wrench**

**Crescent Wrench**

**Rubber Mallet**

 
**Tape Measure**

# OWNERS MANUAL



# OWNERS MANUAL

## Step 2 FRAME ASSEMBLY

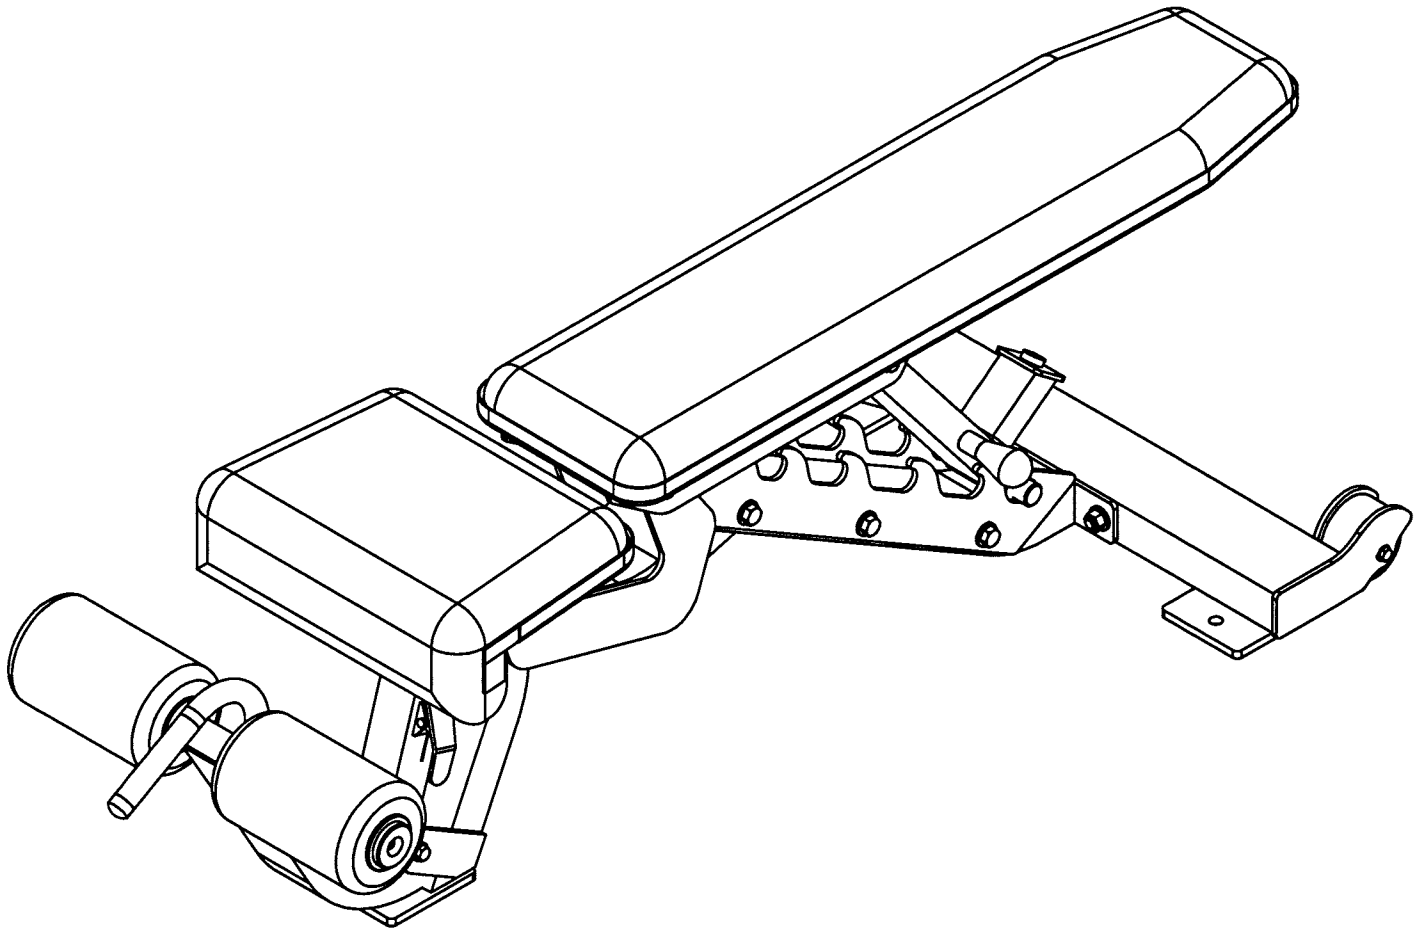

# OWNERS MANUAL

## Step 2a FRAME ASSEMBLY

Start assembly by bolting (1) and (2) together. Wrench Tighten bolts.

 
### Part Descriptions

- 1 - MAIN FRAME
- 2 - MAIN WHEEL ASSEMBLY

### Hardware Descriptions

- H - 1/2" -13UNC x 4 3/4" HEX BOLT
- AA - 1/2" FLAT WASHER
- BA - 1/2" NYLOK NUT
- CA - RUBBER FOOT PAD

# OWNERS MANUAL

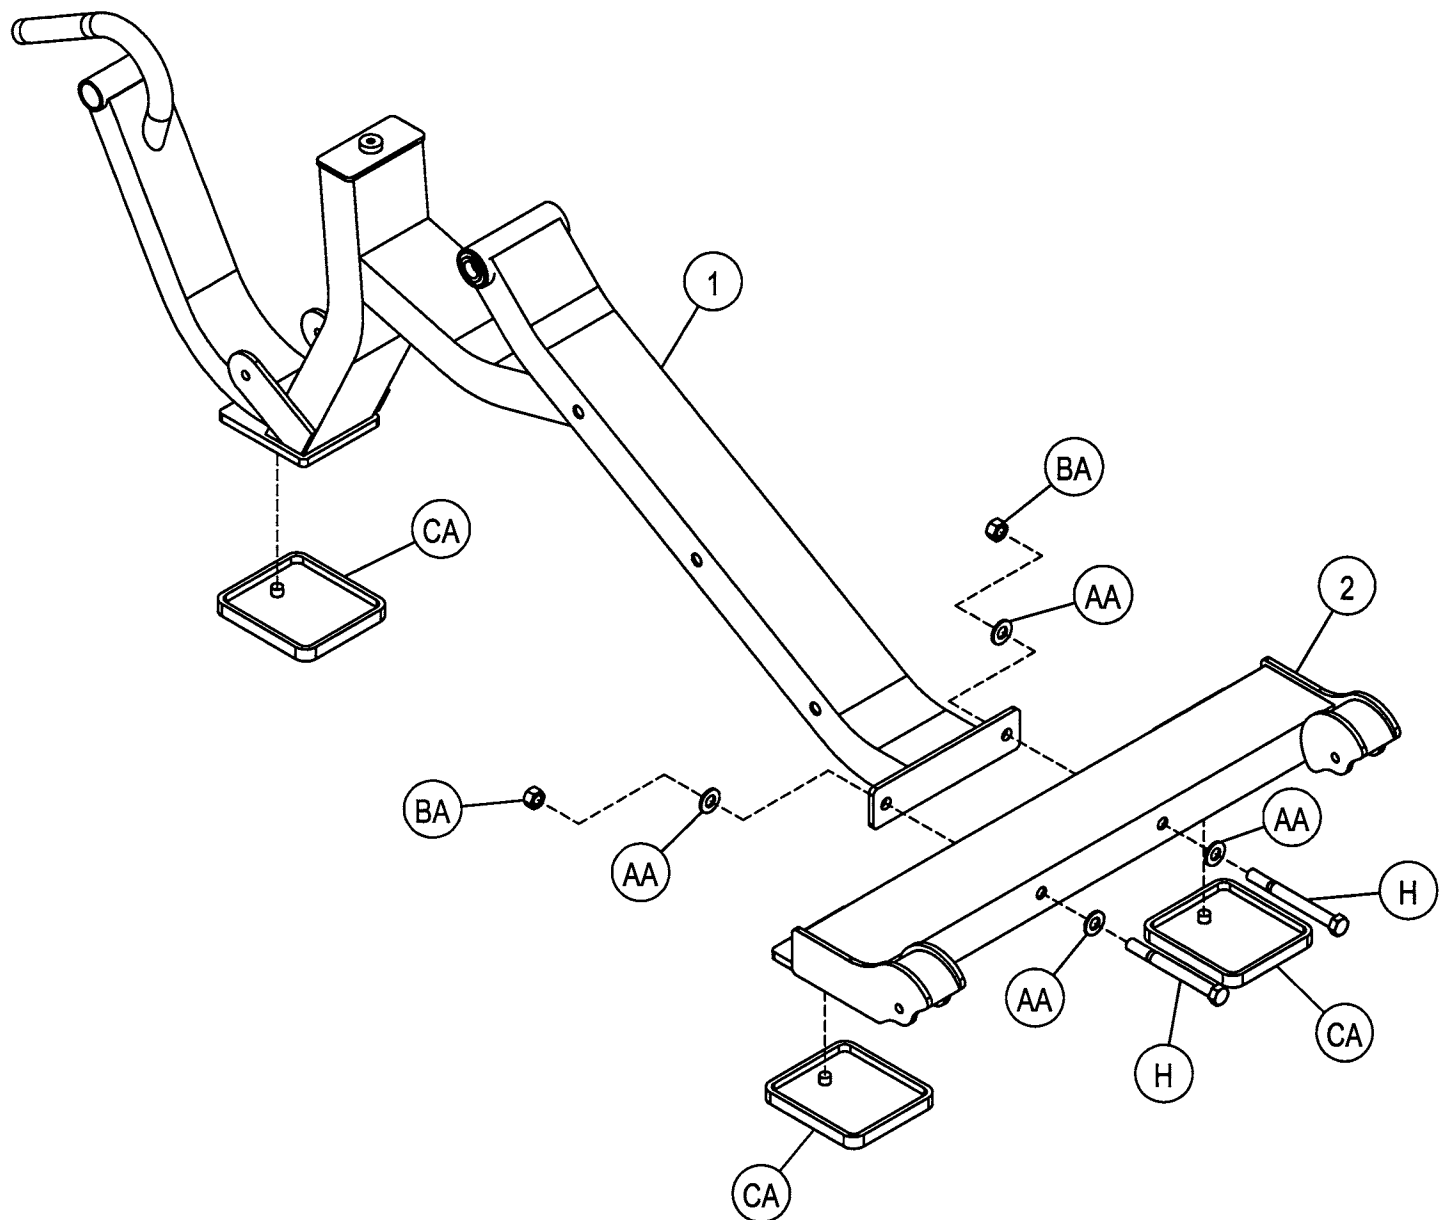

# OWNERS MANUAL

## Step 2b

### FRAME ASSEMBLY

In this step start by inserting (CD) into (CE) and attach (CE) to (2) and Wrench Tighten bolts. Next bolt both (3)'s onto (1) and Wrench Tighten.

#### Part Descriptions

 
- 1 - MAIN FRAME
- 2 - MAIN WHEEL ASSEMBLY
- 3 - SCALLOPED PLATE

#### Hardware Descriptions

- D - 5/16" -18UNC x 2 3/4" HEX BOLT
- E - 1/2" -13UNC x 5" HEX BOLT
- AA - 1/2" FLAT WASHER
- AC - 5/16" SAE WASHER
- BA - 1/2" NYLOK NUT
- BD - 5/16" NYLOK NUT
- CD - WHEEL AXLE
- CE - WHEEL



# OWNERS MANUAL

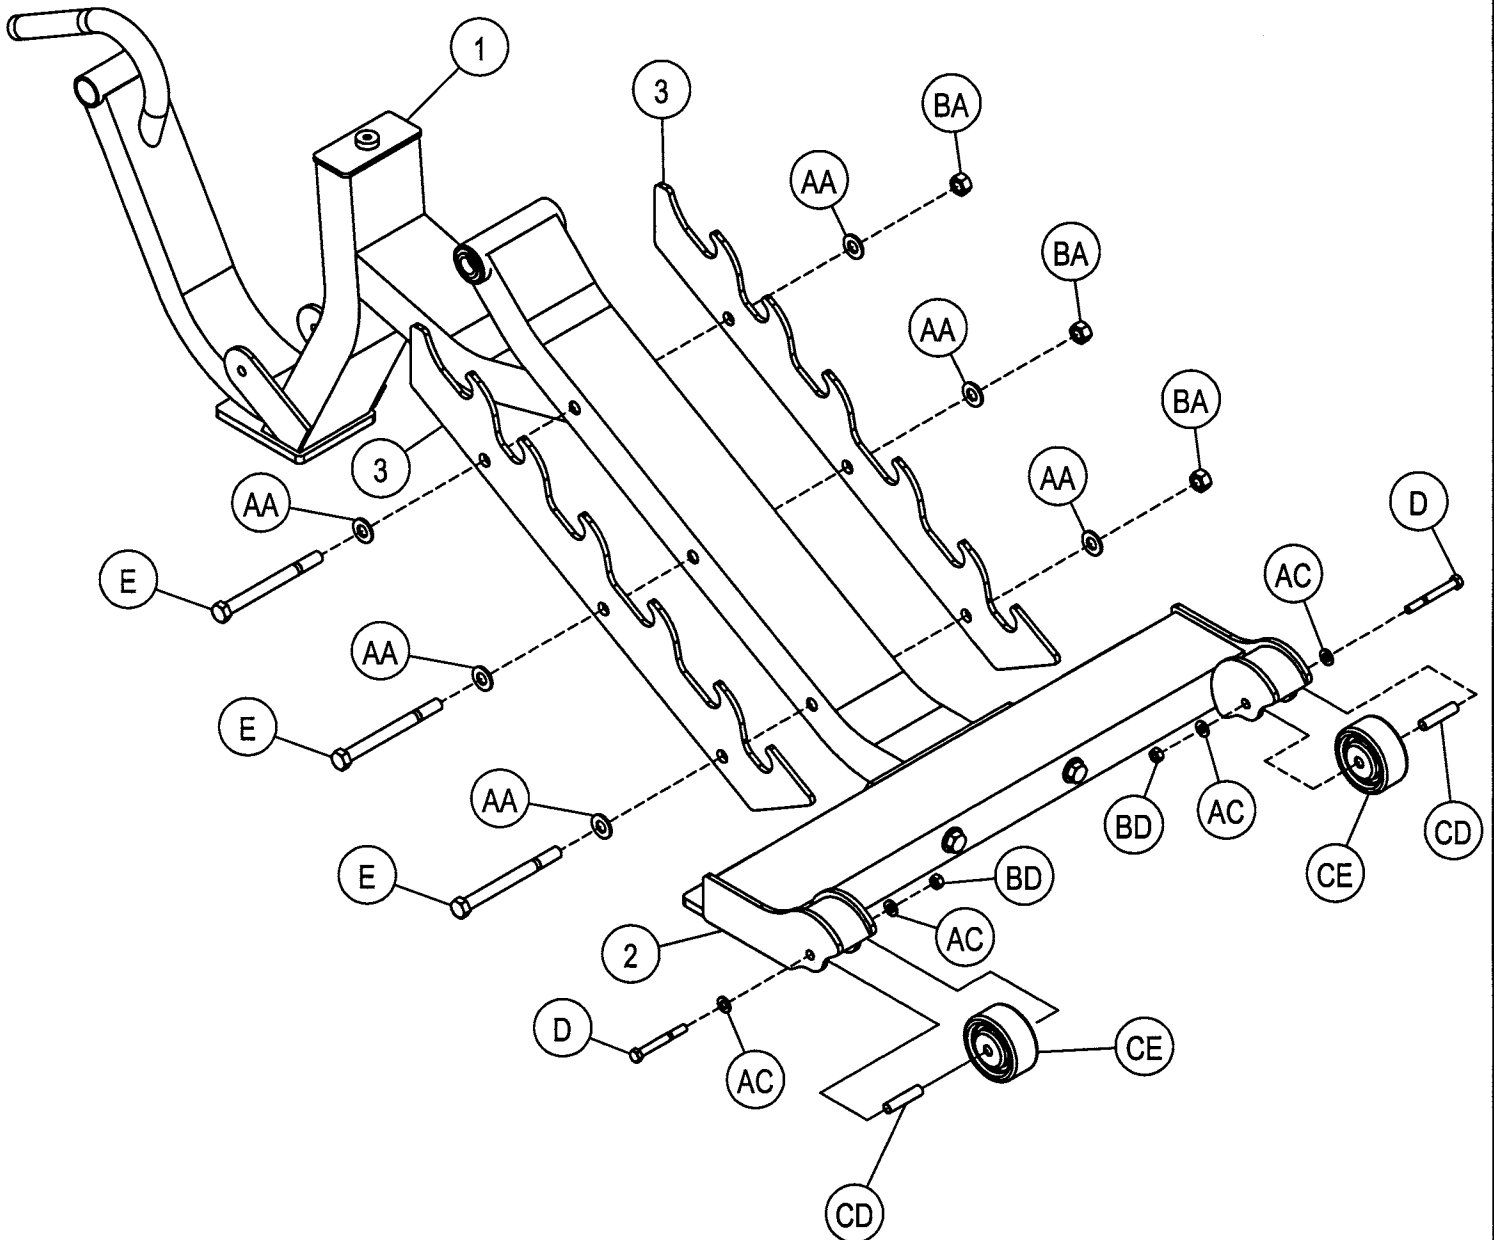

# OWNERS MANUAL

## Step 2c FRAME ASSEMBLY

In this step start by sliding (8) into (4) and secure with (I). Next slide (5) into (4), connect (4) to (1) and Wrench Tighten bolt until snug then back off 1/2 turn or enough to make (4) swing freely.

 
### Part Descriptions

- 1 - MAIN FRAME
- 4 - SEAT SELECTORIZED ASSEMBLY
- 5 - 3/4" DIA. x 3.94" AXLE
- 8 - ADJUSTABLE SEAT ASSEMBLY

### Hardware Descriptions

- J - 3/8" -16UNC x 5" HEX BOLT
- I - 3/8" -16UNC x 3/4" SQ.  
HEAD SET SCREW
- AB - 3/8" WASHER
- BB - 3/8" NYLOK NUT

# OWNERS MANUAL

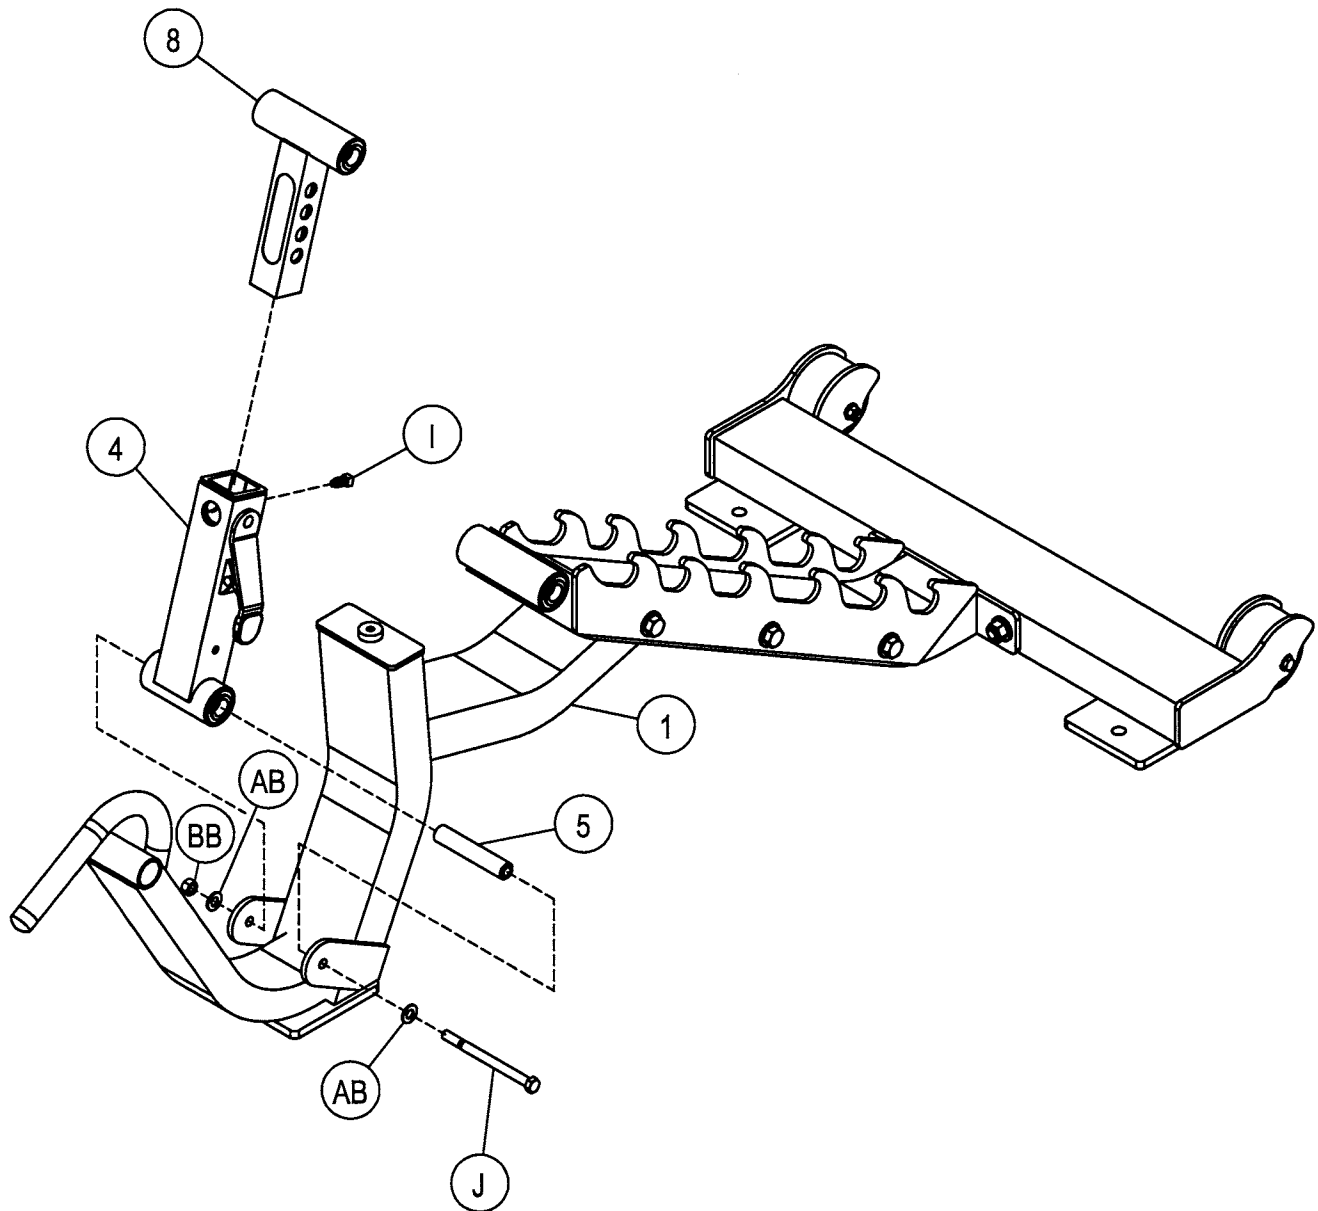

# OWNERS MANUAL

## Step 2d FRAME ASSEMBLY

In this step start by sliding (11) thru (1). Next, starting from one side of (11) slide (AD), (12) and another(AD) onto (11). Apply the same procedured on the other side. *Wrench Tighten* bolts. Next slide (7) into the end of (6) and secure with (K). Now attach (27)'s to both sides of (6).

 
### Part Descriptions

- 1 - MAIN ASSEMBLY
- 6 - SELECTORIZED ASSEMBLY
- 7 - Ø 1" SHAFT x 5.25" L.G.
- 9 - 3/8" FLATHEAD CAP, 2" DIA x 5/16" THICK
- 11 - 1" ROLLER BAR
- 12 - 5" DIA x 8" LG. ROLLER
- 27 - ADJUSTOR KNOB

### Hardware Descriptions

- B - 3/8" -16UNC x 1" FLATHEAD BOLT
- K - 5/16" -16UNC x 1" BUTTON HEAD SCREW
- AD - PLASTIC FENDER WASHER
- AE - 5/16" INTERNAL LOCK WASHER
- AG - 5/16" CURVED WASHER
- CL - NYLINER BUSHING

# OWNERS MANUAL

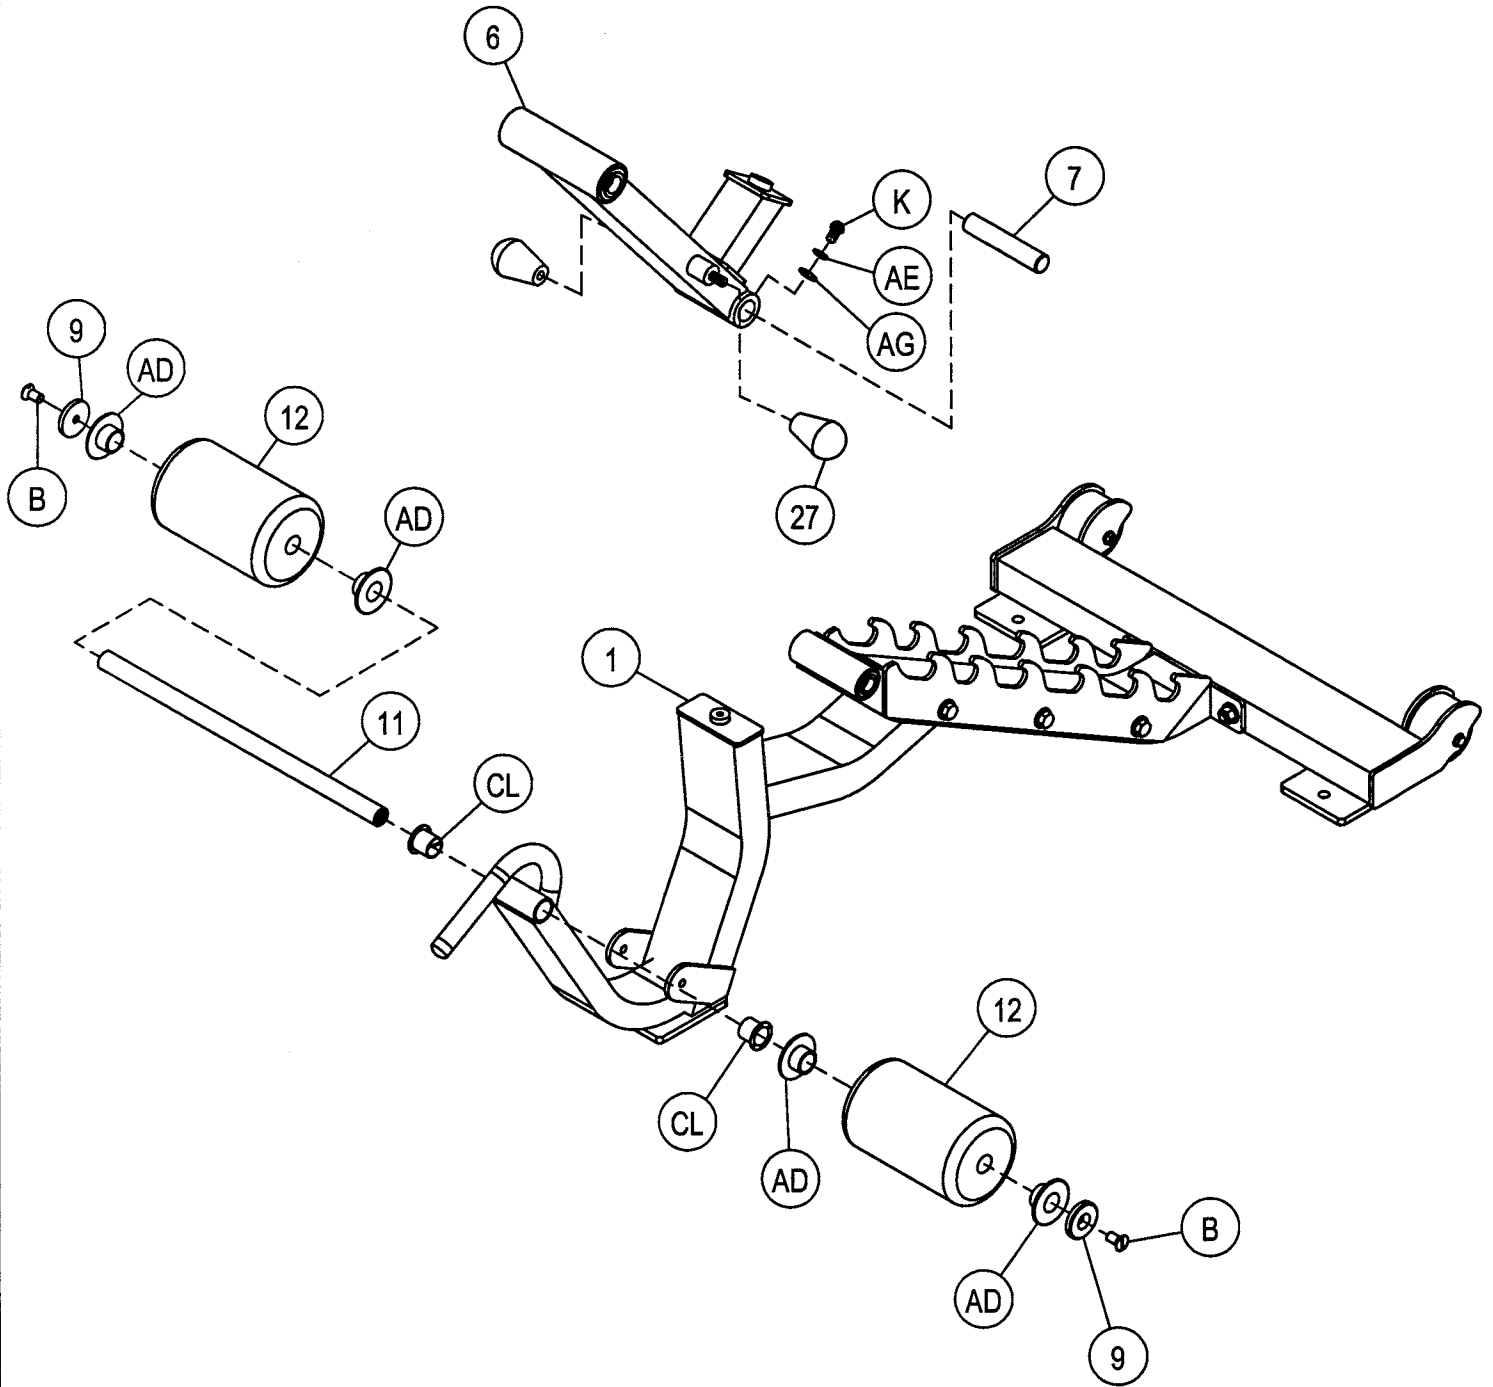

# OWNERS MANUAL

## Step 2e FRAME ASSEMBLY

In this step start by sliding (25) into (8). Connect (13) to (8) and Wrench Tighten bolt snug then back off 1/2 turn or enough to make sure (13) swings freely.

 
### Part Descriptions

8 - ADJUSTABLE SEAT ASSEMBLY  
13 - PIVOTING SEAT ASSY  
25 - 3/4" DIA. x 5.13" AXLE

### Hardware Descriptions

F - 3/8" -16UNC x 6 1/4" HEX BOLT  
AB - 3/8" WASHER  
BB - 3/8" NYLOK NUT

# OWNERS MANUAL

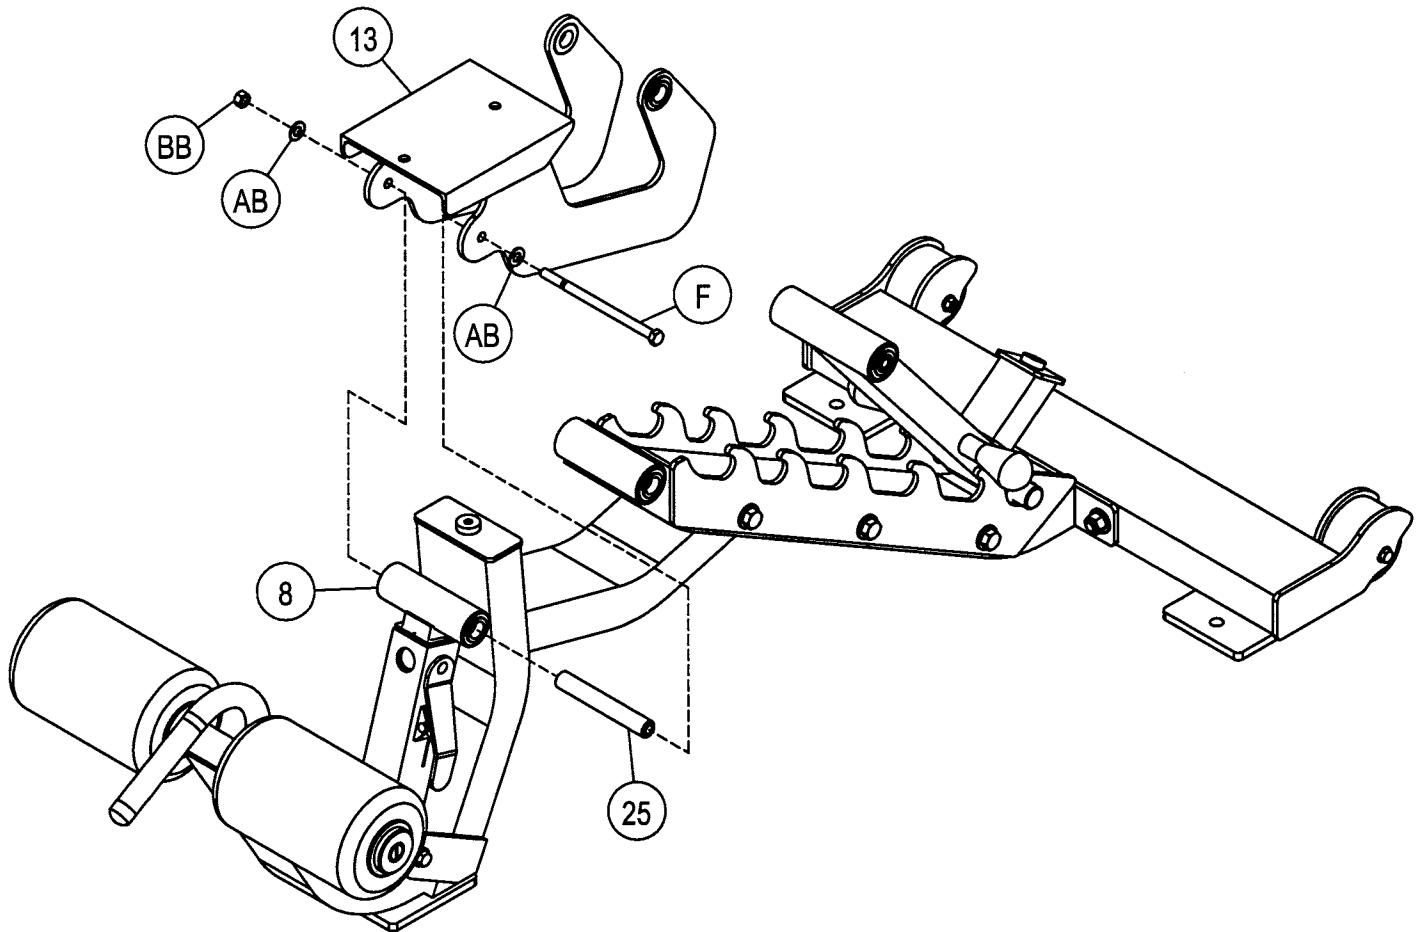

# OWNERS MANUAL

## Step 2f FRAME ASSEMBLY

In this step start by inserting one (26) into (1) and another (26) into (6). Connect pivot points with bolts (A). Wrench Tighten bolts snug then back off 1/2 turn.

### Part Descriptions

 
1 - MAIN ASSEMBLY  
6 - SELECTORIZED ASSEMBLY  
13 - PIVOTING SEAT ASSY  
14 - PIVOTING BACK ASSY  
26 - 3/4" DIA. x 5.94" AXLE

### Hardware Descriptions

A - 3/8" -16UNC x 7" HEX BOLT  
AB - 3/8" WASHER  
BB - 3/8" NYLOK NUT



# OWNERS MANUAL

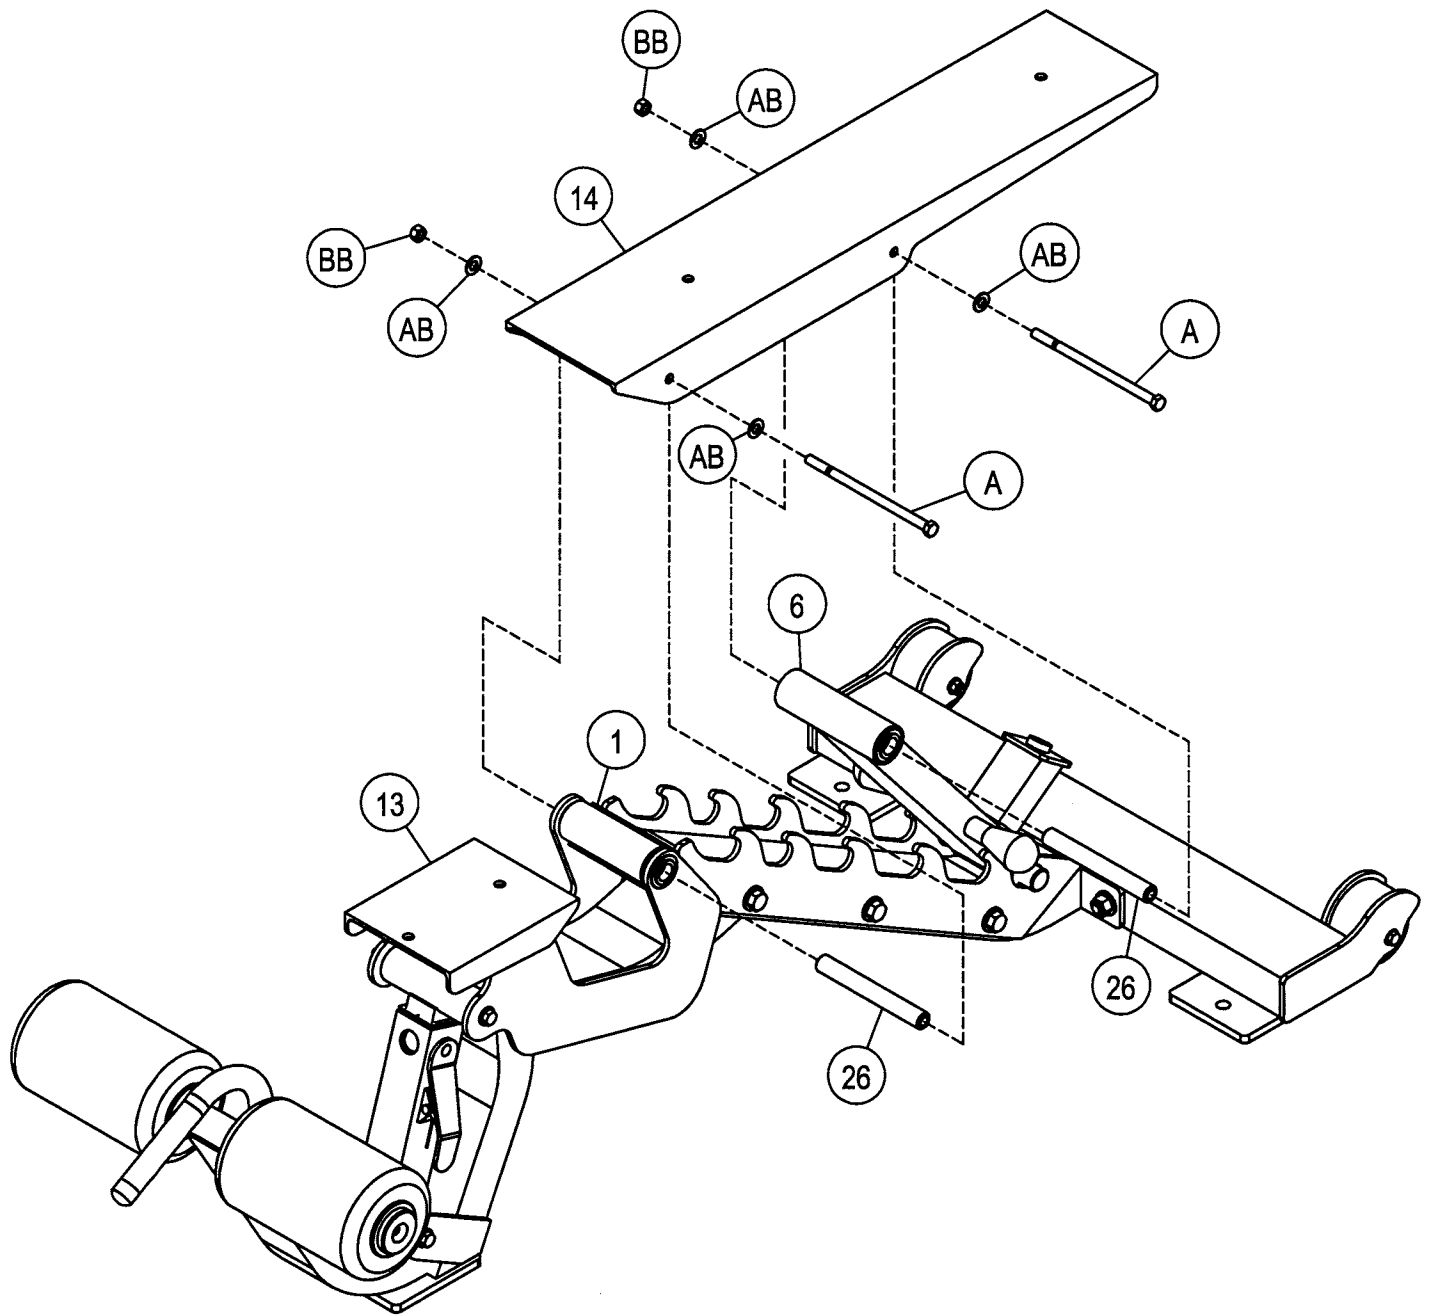

# OWNERS MANUAL

## Step 2g FRAME ASSEMBLY

In this step start by attaching (16) and (15) to (14), then (18) and (17) to (13). Wrench Tighten bolts.

 
### Part Descriptions

13 - PIVOTING SEAT ASSY  
14 - PIVOTING BACK ASSY  
15 - BACK GUARD  
16 - BACK PAD ASSY  
17 - SEAT GUARD  
18 - SEAT PAD ASSY

### Hardware Descriptions

G - 5/16" -18UNC x 1 1/4" HEX BOLT  
AF - 5/16" USS WASHER

# OWNERS MANUAL

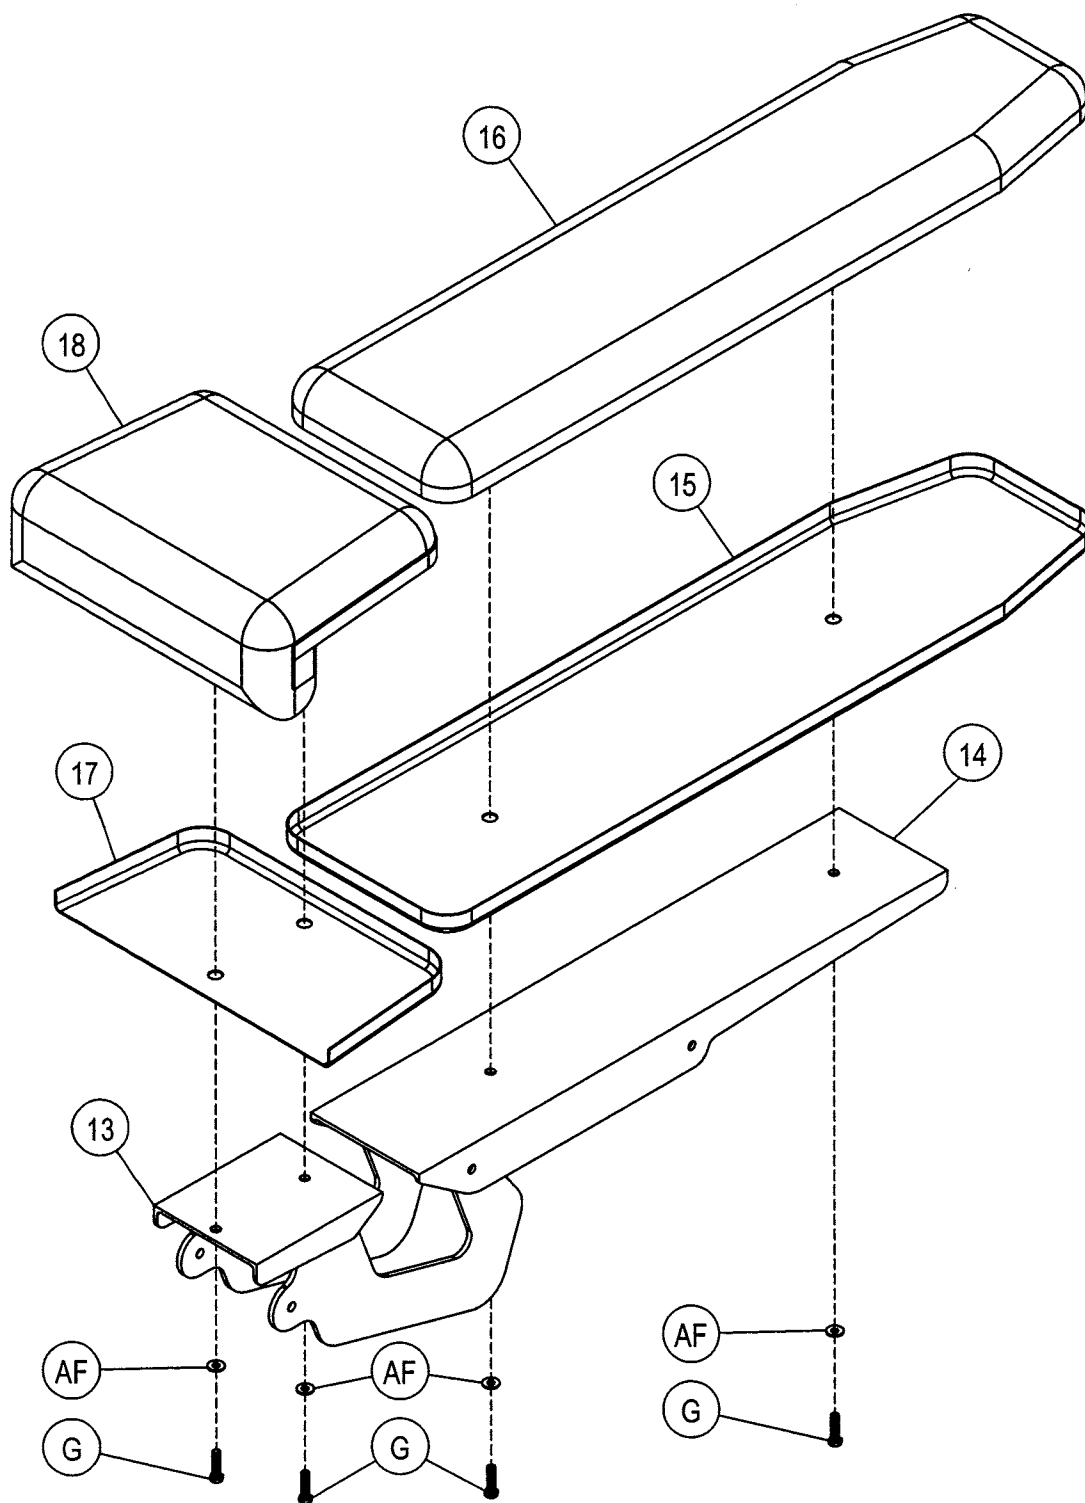


# OWNERS MANUAL



# OWNERS MANUAL
 
## Step 3 PRE-ASSEMBLY

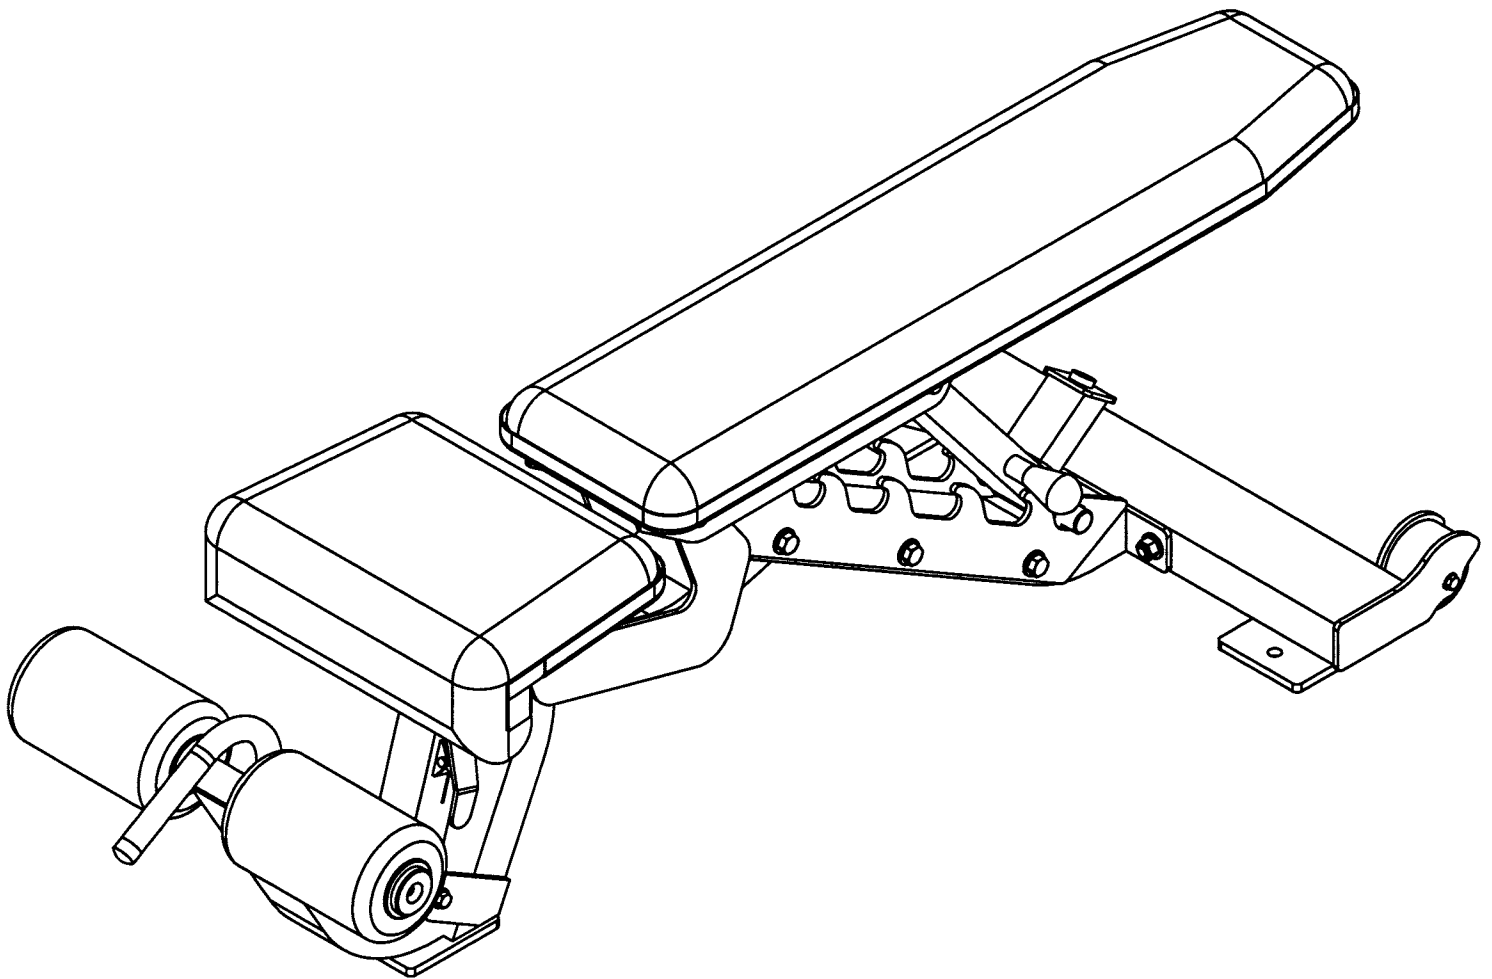

# OWNERS MANUAL

## Step 3a PRE-ASSEMBLY

 
### Part Descriptions

1 - MAIN FRAME  
4 - SEAT SELECTORIZED ASSEMBLY  
6 - SELECTORIZED ASSEMBLY  
8 - ADJUSTABLE SEAT ASSEMBLY  
13 - PIVOTING SEAT ASSEMBLY  
19 - EZ GLIDE SLEEVE  
20 - LATCH ASSEMBLY  
21 - LATCH SPRING  
22 - LATCH PIN  
23 - PLASTIC GRIP  
24 - RUBBER GRIP 5.90" L.G.

### Hardware Descriptions

I - 3/8" -16UNC x 3/4" SQ. HEAD SET  
SCREW  
CB - 3/4" FLANGED BALL BEARING  
CC - PLUG BUMPER  
CF - C-CLIP  
CG - 1 1/2" x 1 1/2" END CAP  
CH - Ø1.00" END CAP

# OWNERS MANUAL

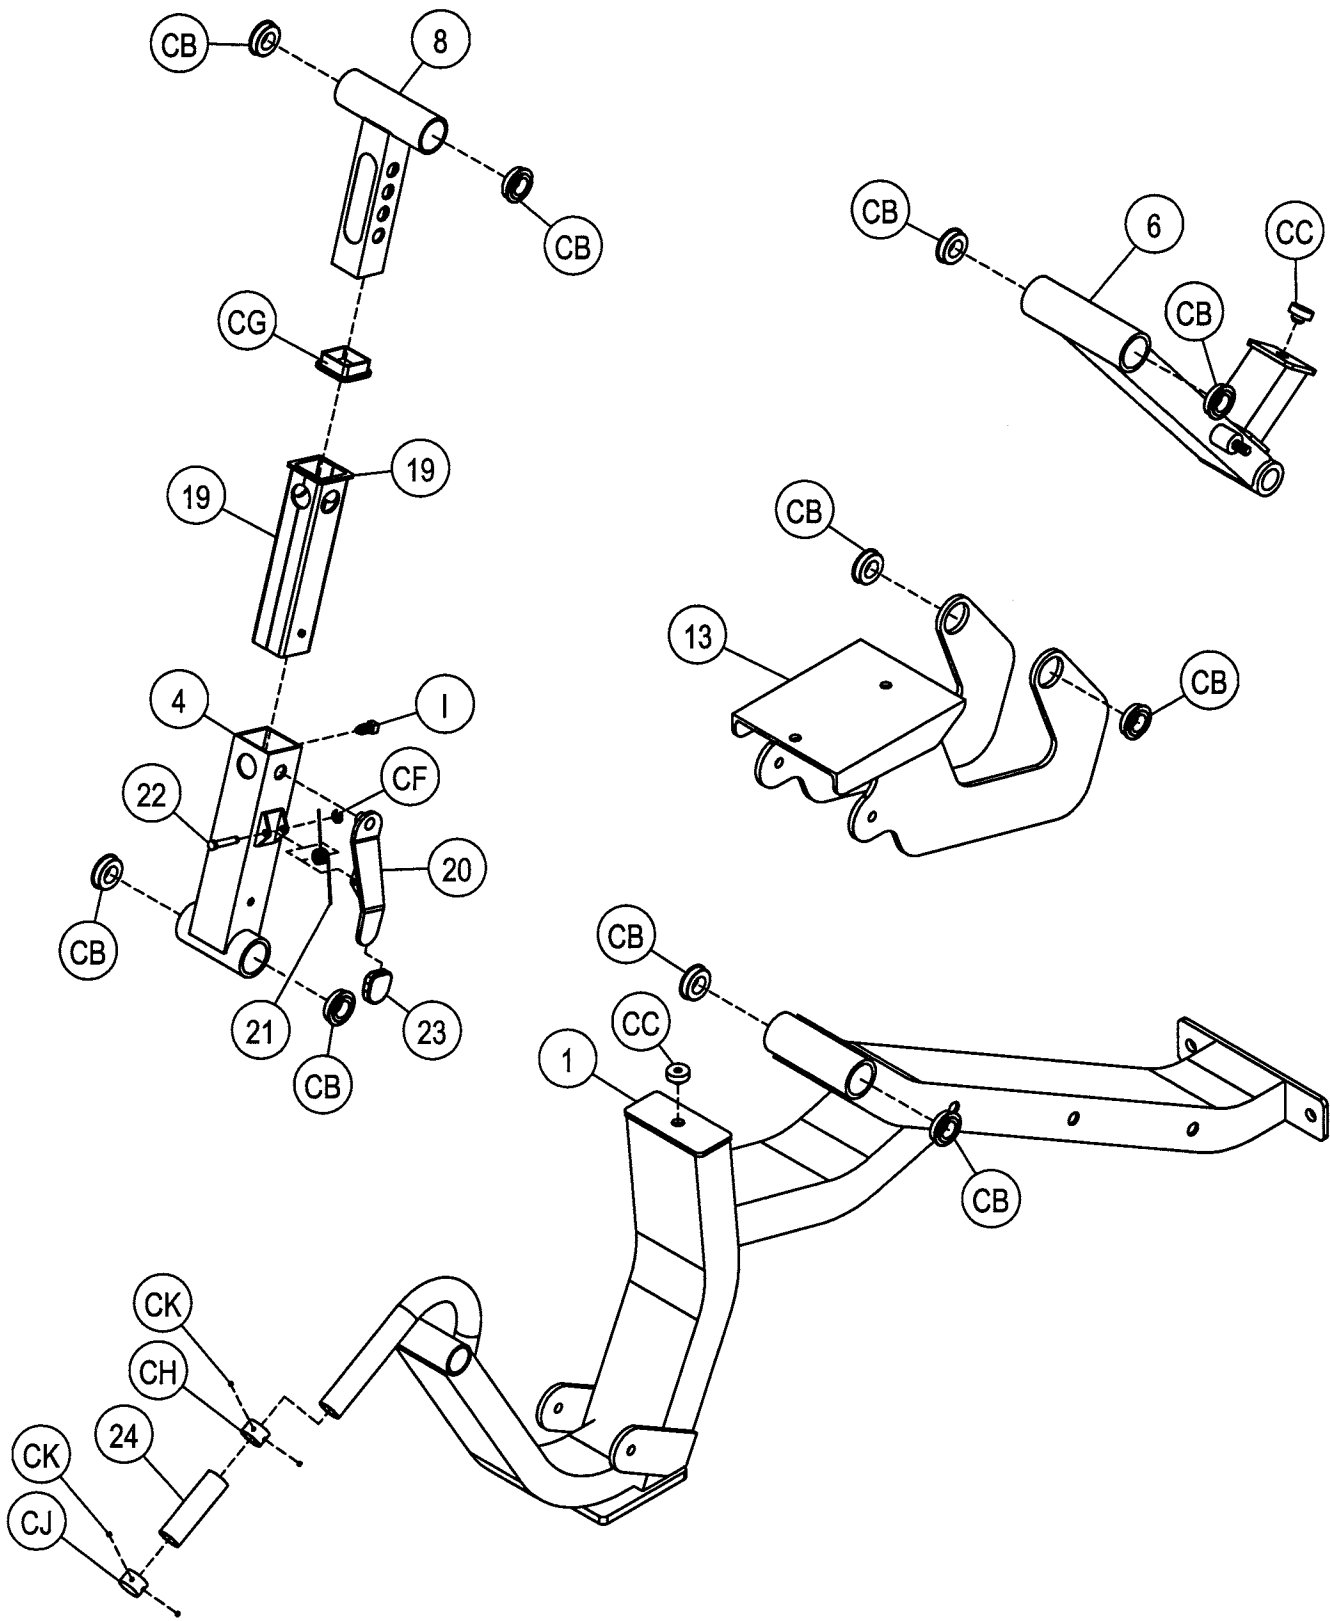

# OWNERS MANUAL

## PART LISTING

<u>Key#</u>	<u>Qty.</u>	<u>Part Number</u>	<u>Description</u>
1	1	026-01X1054	MAIN FRAME
2	1	026-01X1056	MAIN WHEEL ASSEMBLY
3	2	026-01P0981	SCALLOPED PLATE
4	1	026-01X1057	SEAT SELECTORIZED ASSEMBLY
5	1	026-01M0583	Ø3/4" x 3.94" LG. AXLE
6	1	026-01X1055	SELECTORIZED ASSEMBLY
7	1	026-01M0582	Ø1.00" SHAFT X 5.25" LG.
8	1	026-01X1058	ADJUSTABLE SEAT ASSEMBLY
9	2	026-01M0238	3/8" FLATHEAD CAP, Ø2" x 5/16" THICK
11	1	026-01X1060	1" ROLLER BAR ASSEMBLY
12	2	26-STD-10-0244	Ø5.00" X 8.00" LG. ROLLER
13	1	026-01X1059	PIVOTING SEAT ASSEMBLY
14	1	026-01P0982	PIVOTING BACK ASSEMBLY
15	1	026-01PL302	BACK GUARD
16	1	022-01PD0072A	BACK PAD ASSEMBLY
17	1	026-01PL301	SEAT GUARD
18	1	022-01PD0052	SEAT PAD ASSEMBLY
19	2	026-01PL125T	EZ GLIDE SLEEVE
20	1	026-01P0480	LATCH ASSEMBLY
21	1	026-01M0503	LATCH SPRING
22	1	026-01M0309	LATCH PIN
23	1	026-01PL329	PLASTIC CAP
24	1	026-01PL206-7	RUBBER GRIP 4" LG.
25	1	026-01M0584	Ø3/4" x 5.13" LG. AXLE
26	2	026-01M0585	Ø3/4" x 5.94" LG. AXLE
27	2	020-0007004	INCLINE ADJUSTOR KNOB



 
 
# OWNERS MANUAL

## HARDWARE LISTING



<u>Key#</u>	<u>Qty.</u>	<u>Part Number</u>	<u>Description</u>
A	2	011-0407054	3/8" -16UNC x 7" HEX BOLT (WZ)
B	2	011-0102022	3/8" -16UNC x 1" FLAT HEAD BOLT(WZ)
D	2	011-0101037	5/16" -18UNC x 2 3/4" HEX BOLT (WZ)
E	3	011-0407052	1/2" -13UNC x 5" HEX BOLT (WZ)
F	1	011-0007064	3/8" -16UNC x 6 1/4" HEX BOLT (WZ)
G	4	011-0407053	5/16" -18UNC x 1 1/4" HEX BOLT (WZ)
H	2	011-0007001	1/2-13UNC x 4 3/4" HEX BOLT (WZ)
I	1	011-0311013	3/8" -16UNC x 3/4" SQ. HEAD SET SCREW (BZ)
J	1	011-0107022	3/8" -16UNC x 5" HEX BOLT (WZ)
K	1	011-0101030	5/16" -18UNC x 1" BUTTON HEAD SCREW (WZ)
AA	10	013-0102003	1/2" SAE FLAT WASHER
AB	8	013-0002004	3/8" SAE WASHER
AC	4	013-0002001	5/16" SAE WASHER
AD	4	26-STD-06-0254	PLASTIC FLANGED BUSHING
AE	1	013-0102007	5/16" INTERNAL LOCK WASHER
AF	4	013-0102004	5/16" USS WASHER
AG	1	013-0903003	5/16" CURVED WASHER
BA	5	012-0004001	1/2" NYLOK NUT (WZ)
BB	4	012-0004004	3/8" NYLOK NUT (WZ)
BD	2	012-0102006	5/16" NYLOK NUT (WZ)
CA	3	026-01PL195	RUBBER FOOT PAD
CB	10	014-0101014	3/4" FLANGED BALL BEARING
CC	2	019-0001001	PLUG BUMPER
CD	2	014-0016006	WHEEL AXLE
CE	2	020-0013001	WHEEL
CF	1	014-0015001	C-CLIP
CG	1	016-0201004	1 1/2" x 1 1/2" END CAP
CH	1	026-01M0324	1.030" I.D. x .375" ALUMINUM RING
CJ	1	026-01M0323	1.030" I.D. x .75" ALUMINUM CAP
CK	4	011-0311005	10-32 x 1/8" SET SCREW
CL	2	014-0011001	NYLINER BUSHING

# OWNERS MANUAL



5/16" HEX BOLT

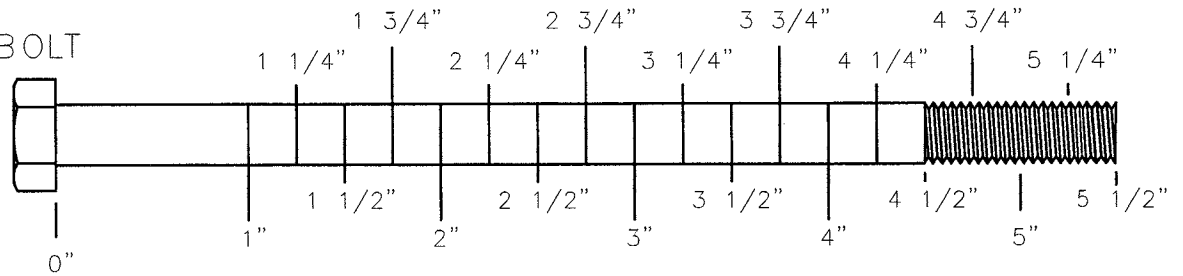



3/8" HEX BOLT

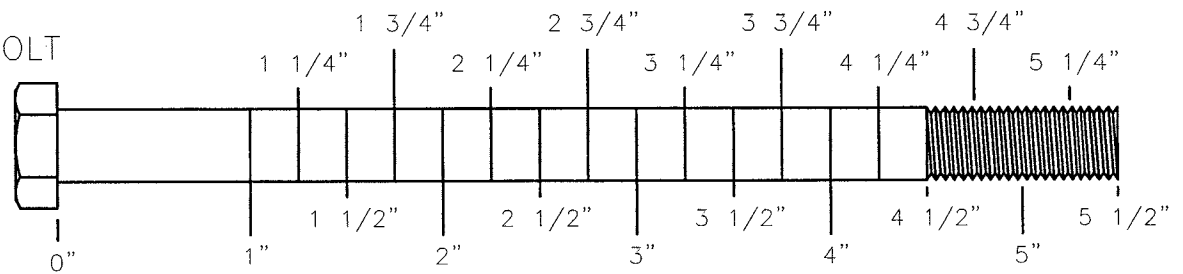  

1/2" HEX BOLT

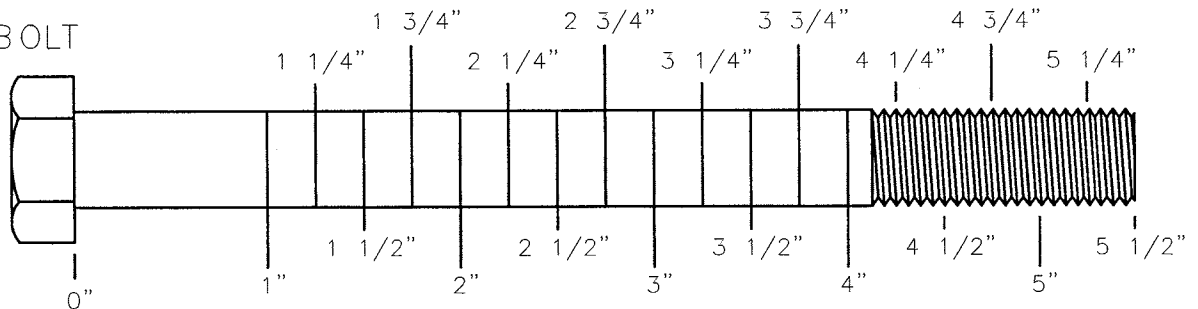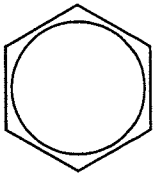  


1/2" SHOULDER BOLT

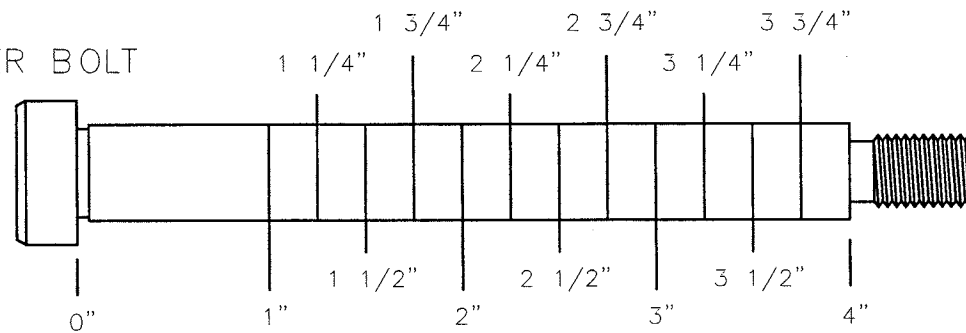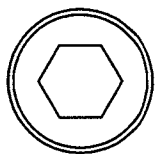  


# OWNERS MANUAL

 
3/8" FLATHEAD  
SOCKET CAP SCREW

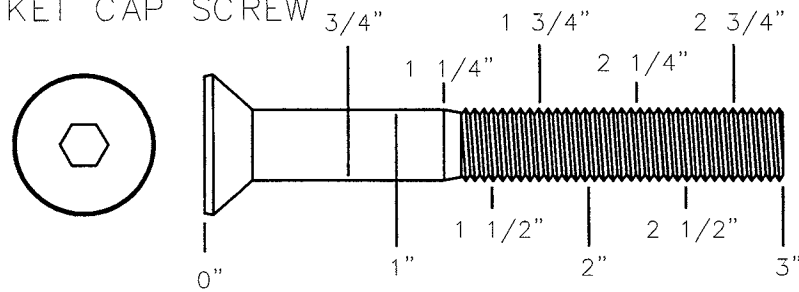


3/8" SOCKET  
CAP SCREW

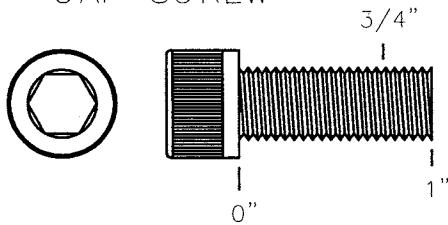 


3/8" BUTTON  
HEAD CAP SCREW

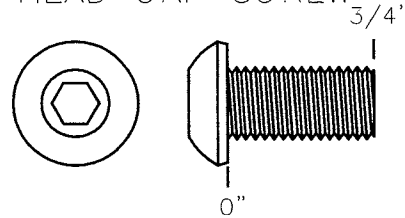 

1/4" HEX  
BOLT

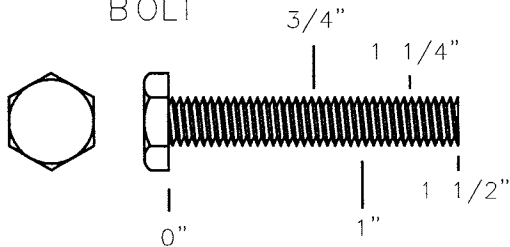 


1/2" FLATHEAD  
SOCKET CAP SCREW

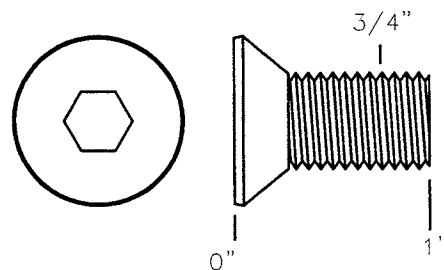 


# OWNERS MANUAL

 
5/16"  
FLAT WASHER  
LARGE, USS, 25mm

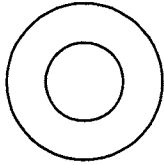


3/8"  
FLAT  
WASHER

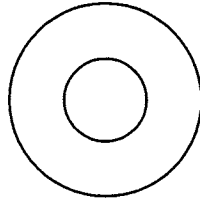 

1/2"  
FLAT WASHER  
SMALL, SAE, 26mm

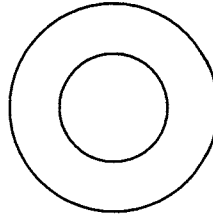 


1/2"  
FLAT WASHER  
LARGE, USS, 34mm

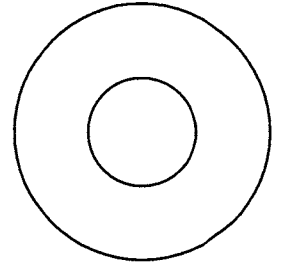 


1/4"  
LOCK WASHER



 
3/8"  
LOCK WASHER

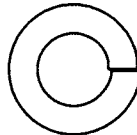


1/2"  
LOCK WASHER

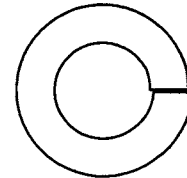 


1" SHIM WASHER

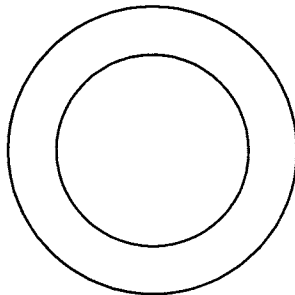 


3/8" FENDER WASHER

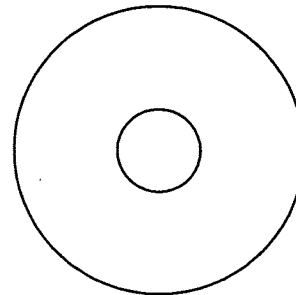 

1 1/16"  
FENDER WASHER

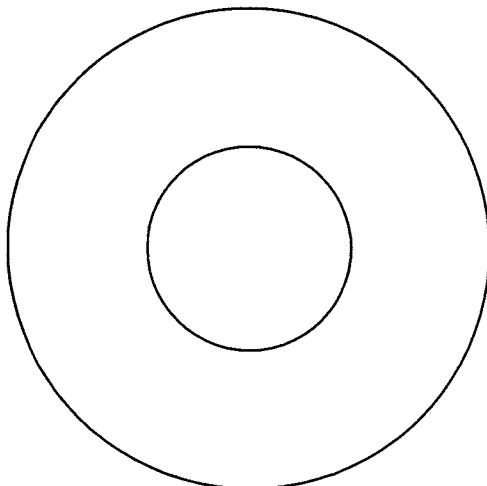 


PLASTIC 1 1/16"  
FENDER WASHER

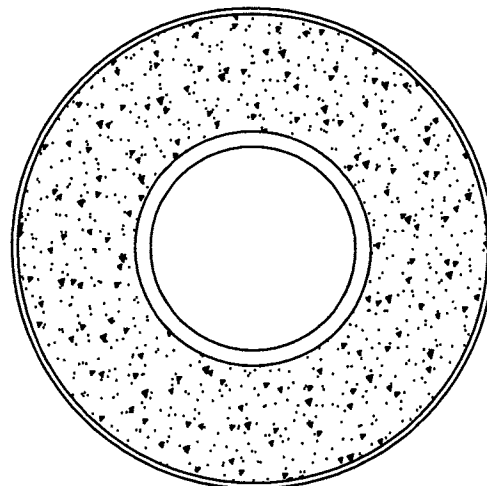 


# OWNERS MANUAL

 
1/4" LONG  
FLANGED SPACER

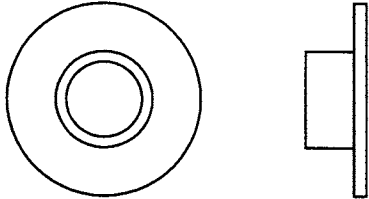


1/2" LONG  
FLANGED SPACER

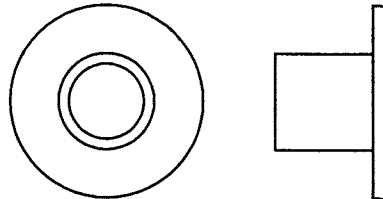 

1/4" LONG HEAVY  
FLANGED SPACER

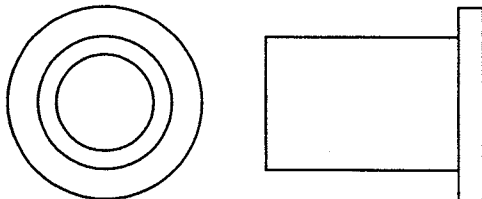 


11/16" LONG HEAVY  
FLANGED SPACER

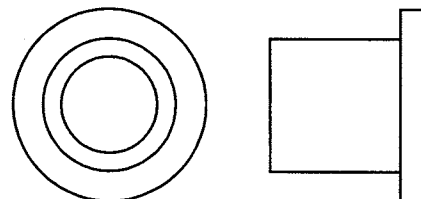 


1/2" LONG  
SPACER



 
1" LONG  
SPACER



1 3/8" ALUMINUM  
FLATHEAD CAP

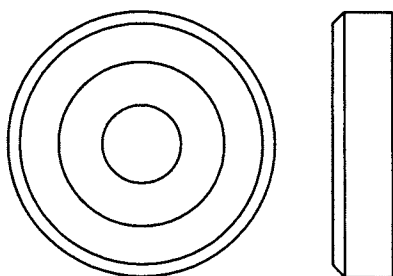 

1 5/8" ALUMINUM  
FLATHEAD CAP

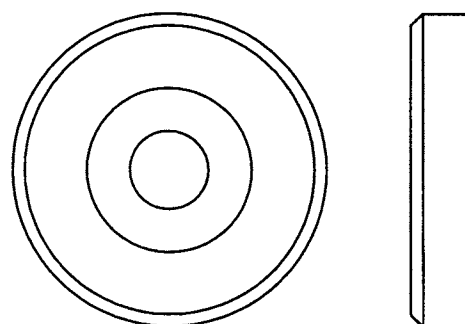 

# OWNERS MANUAL

## WEIGHT TRAINING TIPS

Always consult your physician before starting any exercise program.

Hoist equipment is designed to maximize your time spent working out. Having an exercise routine planned out in advance will allow you to get the most benefit out of the time spent exercising, and will also enable you to work all the major muscle groups.

Warm up properly before engaging in weight resistance training. Stretching, yoga, jogging, calisthenics or other cardiovascular exercise can help prepare your body for the heavier workload of lifting weights.

Learn how to perform the exercise correctly before using heavy weight. Correct form is important to avoid injury and to ensure that you work the proper muscle groups.

Know your limitations. If you are new to weight training or are embarking on an exercise regimen after a long layoff, start slowly and build foundational strength over a longer period of time.

Pay attention to your breathing. Exhale when you exert is a general rule of thumb. Never hold your breath.

# OWNERS MANUAL



# OWNERS MANUAL

# WEIGHT TRAINING EXERCISE LOG

**S** = Sets    **R** = Repetition per set    **W** = Weight used

[illegible]



 
# OWNERS MANUAL

# OWNERS MANUAL

## DECAL PLACEMENTS

### Decal Descriptions

- 1 - 021-0003131
- 2 - 021-0004072
- 3 - 021-0004033
- 4 - 021-0003230
- 5 - 021-0003148
- 6 - SERIAL # DECAL

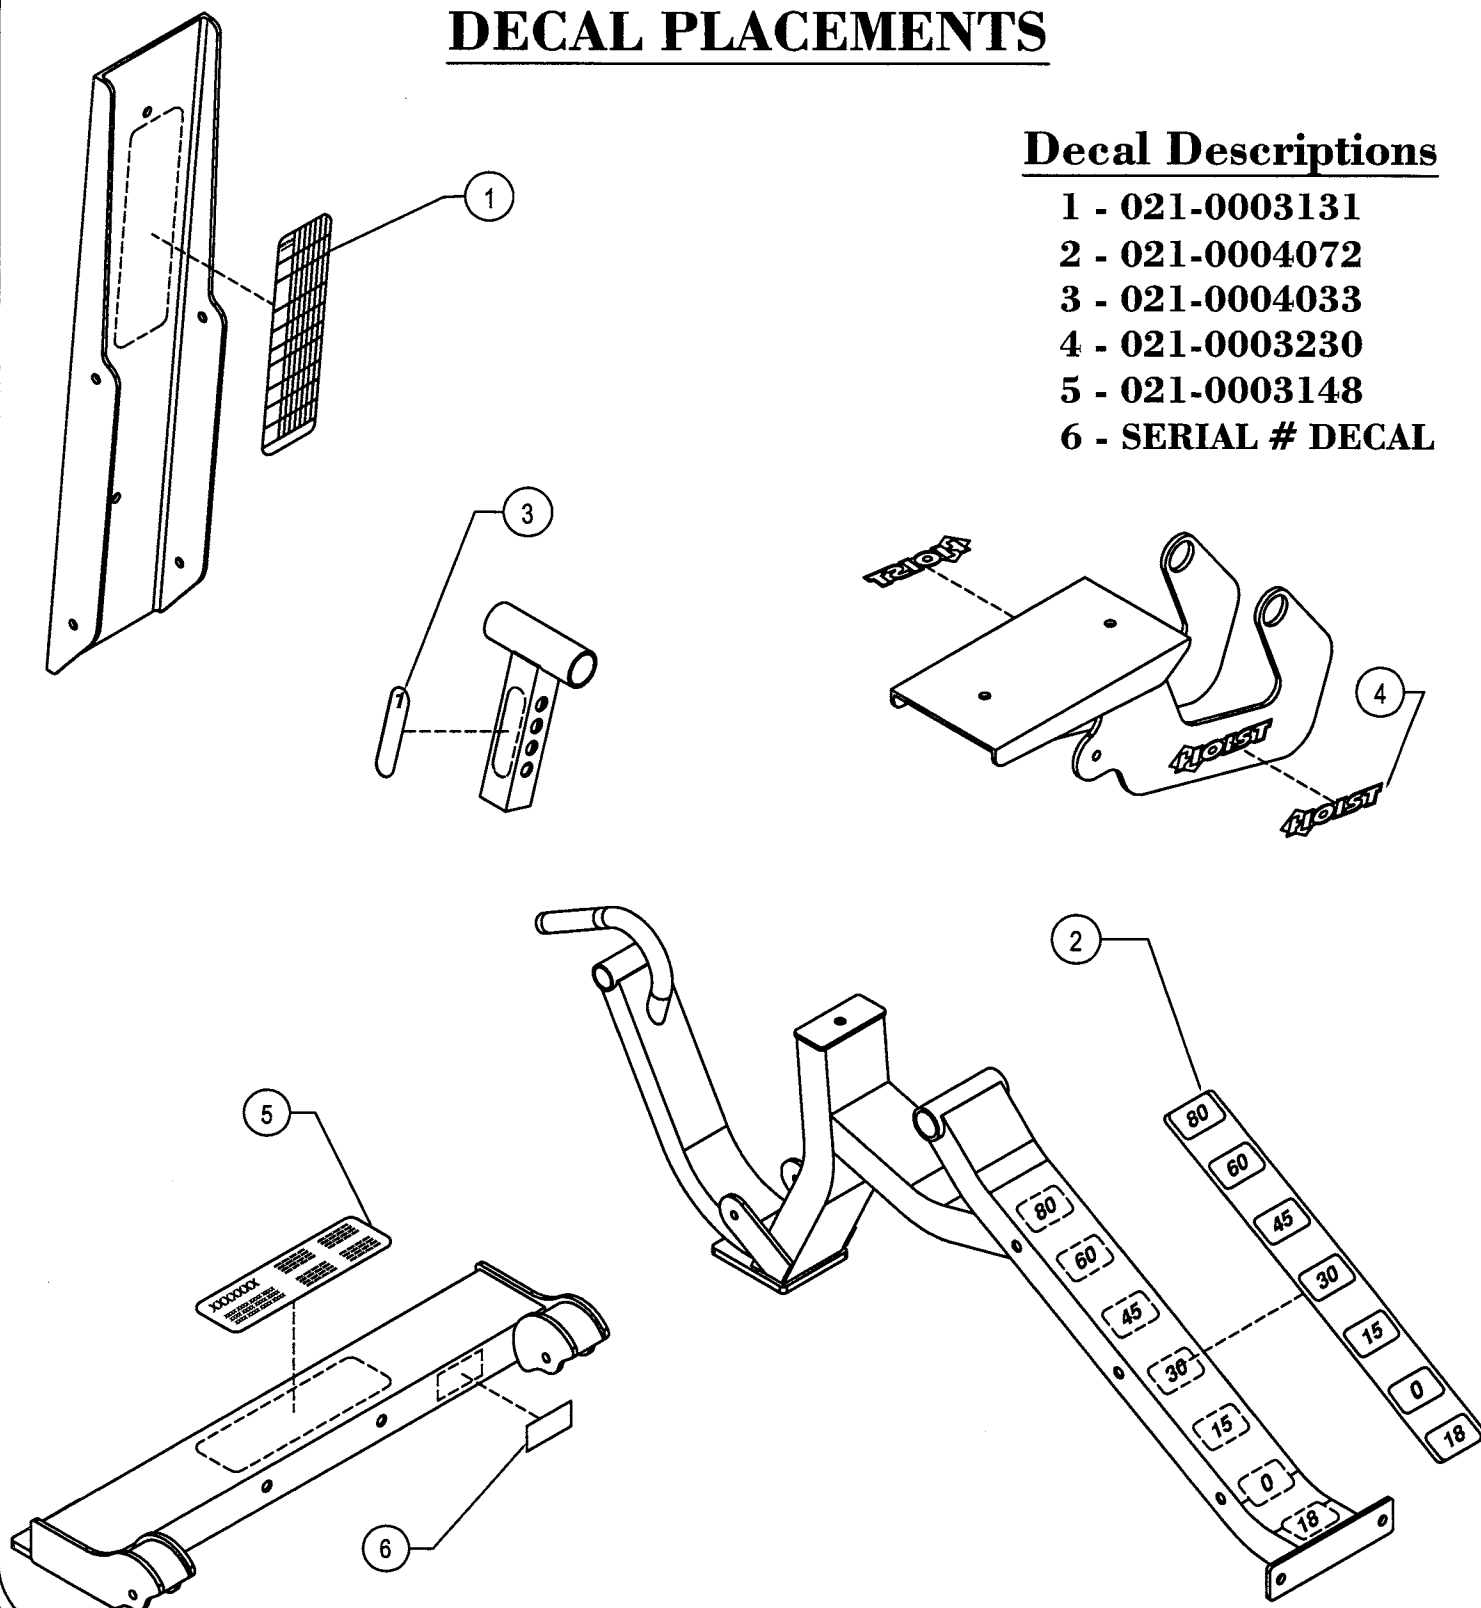

# OWNERS MANUAL

## DECAL PLACEMENTS

*This decal has been attached to this piece of equipment to provide information regarding operation, safety and maintenance. Before use, take the time to read these decals.*

ROUTINE MAINTENANCE	Daily	Weekly	Monthly	Months 9	Yearly
Inspect; Links, Pull Pins, Snap Locks, Swivels, Weight Stack Pins	X				
Clean; Upholstery	X				
Inspect; Cables or Belts and their tension	X				
Inspect; Accessory Bars and Handles		X			
Inspect; All Decals		X			
Inspect; All Nuts and Bolts, Tighten if Needed		X			
Inspect; Anti-Skid Surfaces		X			
Clean & Lubricate; Guide Rods with a Teflon (PTFE) based lubricant (Supertube)			X		
Lubricate; Seat Sleeves, Turcite Bushings, Linear Bearings			X		
Clean and Wax; All Glossy Finishes				X	
Repack with Grease; Linear Bearings				X	
Replace; Cables, Belts and Connecting Parts					X

021-0003131

80

60

45

30

15

0

18

021-0004072

# OWNERS MANUAL

## DECAL PLACEMENTS

***SERIAL # DECAL; Always refer to the number shown on your piece of equipment when talking to customer service or ordering parts.***

**1 2 3 4**

**021-0004033**



**021-0003230**

### **WARNING**

**USE ONLY GENUINE HOIST  
REPLACEMENT PARTS. FAILURE TO  
DO SO WILL VOID WARRANTY AND  
COULD RESULT IN PERSONAL INJURY  
OR EVEN DEATH. THERE IS A RISK  
ASSUMED BY INDIVIDUALS WHO  
USE THIS TYPE OF EQUIPMENT.  
TO MINIMIZE THE RISK  
ALWAYS FOLLOW THESE  
SIMPLE RULES.**

**1. READ & UNDERSTAND ALL  
ENCLOSED INSTRUCTIONS before  
using this equipment.**

**2. INSPECT EQUIPMENT BEFORE  
EACH USE. Replace all parts at the  
first signs of wear or damage. If in  
doubt about a certain part, DO NOT  
use the equipment until the part is  
replaced. Failure to replace worn or  
damaged parts may result in injury.**

**3. FOLLOW ROUTINE  
MAINTENANCE SCHEDULE**

**4. CONSULT YOUR PHYSICIAN  
BEFORE STARTING ANY  
EXERCISE PROGRAM. Warm up  
properly before engaging in weight  
resistance training. Stop exercising  
if you feel faint or dizzy.**

**5. TO PREVENT THE POSSIBILITY  
OF SERIOUS INJURY, KEEP CLEAR  
OF ALL MOVING PARTS. Do not  
attempt to free any jammed part by  
yourself. Obtain assistance in order to  
avoid possible injury.**

**6. Take your time and do not rush the  
exercise. Practice proper breathing,  
NEVER hold your breath.**

**7. CHILDREN SHOULD NOT BE  
ALLOWED TO USE THIS  
EQUIPMENT. To avoid possible  
injury, children should be kept at a safe  
distance when this equipment is in use.  
Teenagers should not use this equipment  
without adult supervision.**

**8. CALL YOUR AUTHORIZED  
HOIST DISTRIBUTOR if you have  
any questions on the proper use or  
maintenance of this equipment.**

**021-0003148**



# OWNERS MANUAL

## DECAL PLACEMENTS

***SERIAL # DECAL; Always refer to the number shown on your piece of equipment when talking to customer service or ordering parts.***



**1-800-548-5438**

*www.hoistfitness.com*

**SERIAL # 00-00-000000**



**SERIAL # DECAL**

# OWNERS MANUAL



# OWNERS MANUAL

## HOIST FITNESS SYSTEMS GENERAL MAINTENANCE INFORMATION

### **Links, Pull-Pins, Snap Locks, Swivels, Weight Stack Pins:**

- \*Check all pieces for signs of visible wear or damage.*
- \*Check springs in snap hooks and pull-pins for proper tension and alignment.*
- \*If the spring sticks or has lost its rigidity, replace it immediately.*

### **Upholstery:**

- \*To ensure prolonged upholstery life and proper hygiene, all upholstered pads should be wiped down with a damp cloth after every workout.*
- \*Periodically take the time to use a mild soap or an approved vinyl upholstery cleaner to deter the onset of cracking or drying. Avoid using any abrasive cleaners or cleaners not intended for use on vinyl.*
- \*Replace ripped or worn upholstery immediately.*
- \*Keep sharp or pointed objects clear of all upholstery.*

### **Guide Rods:**

- \*Wipe clean with a dust free rag. Lubricate once a week with a Silicon or Teflon based lubricant.*

### **Decals:**

- \*Inspect and familiarize yourself with any safety warnings or other user information posted on each decal.*

### **Nuts and Bolts:**

- \*Inspect all nuts and bolts for any loosening and tighten if needed.*
- \*Go through a re-tightening sequence periodically to ensure that all hardware is tensioned proper.*

### **Anti-Skid Surfaces:**

- \*These surfaces are designed to supply secure footing and need to be replaced if they appear worn or become slippery.*

### **Belts and Cables:**

- \*Hoist uses only high quality belt, and mil-spec cables.*
- \*Visually inspect the belts and cables for fraying, cracking, peeling or discoloration.*
- \*While the machine is not in use, carefully run your fingers along the belt or cable to feel for thinning or bulging areas.*
- \*Replace belts and cables immediately at the first signs of damage or wear. Do not use equipment until belts or cables has been replaced.*

# OWNERS MANUAL

## GENERAL MAINTENANCE INFORMATION (CONTINUED)

### Cable Tension:

*\*Referring to the Owners Manual, check all cable bolts and attachment to be sure they are properly attached.*

*\*Check slack in cables and readjust cable tension if needed.*

### Seat Sleeves, Turcite Bushings:

*\*Wipe down adjusting tubes with a dust free rag before applying lubricant.*

*\*Lubricate seat sleeves and turcite bushings with a Silicon or Teflon based lubricant spray.*

### Linear Bearings:

*\*Referring to the Owners Manual carefully disassemble the bearing from its housing and place a finger full of light grease (lithium, super lube, etc.) into the inside of the bearing. Using your finger, press the grease into the ball-bearings and their tracks. repeat until the ball-bearing tracks are full of grease. Insert the shaft back into the bearing and wipe off excess grease.*

**PLEASE KEEP THIS FOR YOUR RECORDS**



# OWNERS MANUAL

## HOIST FITNESS SYSTEMS LIMITED LIFETIME WARRANTY

Hoist Fitness Systems warrants this product to the **original purchaser** to be free from defects in workmanship and/or materials under normal use or service. If at any time a component part is defective, Hoist Fitness Systems shall repair or replace it (at Hoist Fitness Systems option) within a reasonable period of time. This warranty does not cover costs of removal, transportation or reinstallation. This warranty shall not apply if the defect was caused by misuse, neglect or normal wear and tear.

Starting from the original date of purchase, normal wear and tear shall be considered as the following: All malfunctions of upholstery and paint that occur after 90 days; all malfunctions of electronic components, belts or cables that occur after one year; all malfunctions of pulleys, bearings or bushings that occur after five years. The frame and all welded components are warranted for the life of the product.

Hoist Fitness Systems sole responsibility shall be to repair or replace the component within the terms stated above. Hoist Fitness Systems shall not be liable for any loss or damage of any kind including any incidental or consequential damages resulting, directly or indirectly from any warranty expressed or implied or any other failure of this product.

### WHAT IS NOT COVERED BY THIS WARRANTY

Hoist's sole obligation under this warranty is limited to either repair or replacement of parts, subject to the additions below. This warranty neither assumes nor authorizes any person to assume obligations other than expressly covered by this warranty.

**NO CONSEQUENTIAL DAMAGES.** Hoist is not responsible for economic loss; profit loss; or special, indirect, or consequential damages.

**WARRANTY IS NOT TRANSFERABLE.** This warranty is not assignable and applies only in favor of the original purchaser/user to whom delivered. Any such assignment or transfer shall void the warranties herein made and shall void all warranties, expressed, implied or statutory, except the one (1) and (5) year warranty described above. These warranties are exclusive and in lieu of all other warranties, including implied warranty and merchantability or fitness for a particular purpose. There are no warranties which extend beyond the description on the face hereof.

**ALTERATION, NEGLECT, ABUSE, MISUSE, NORMAL WEAR & TEAR, ACCIDENT, DAMAGE DURING TRANSIT OR INSTALLATION FIRE, FLOOD, ACTS OF GOD.** Hoist is not responsible for the repair or replacement of any parts that Hoist determines have been subjected after the date of manufacture to alteration, neglect, abuse, misuse, normal wear & tear, accident, damage during transit or installation, fire, flood, or an **ACT OF GOD**.

**TRANSPORTATION COSTS.** Hoist will accept parts covered under this warranty freight collect, provided that shipment has received prior approval. Hoist is not responsible for any other transportation costs, but will ship freight collect parts either repaired or replaced under these warranties.

**WARRANTY CLAIMS.** All claims should include: model number, the serial number, proof of purchase, date of installation, and all pertinent information supporting the existence of the alleged defect.

Hoist Fitness Systems  
9990 Empire St. #130  
San Diego, Calif. 92126  
(800)548-5438

Web Site - [www.hoistfitness.com](http://www.hoistfitness.com)

**PLEASE KEEP THIS FOR YOUR RECORDS**